

Aluminum Front Half Doors for Polaris Ranger 570 Midsize



YAP-030509-020

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.


IMPORTANT

The *Half Doors* are exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.


INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK".
Turn key to "OFF" position and remove from vehicle.

Product picture

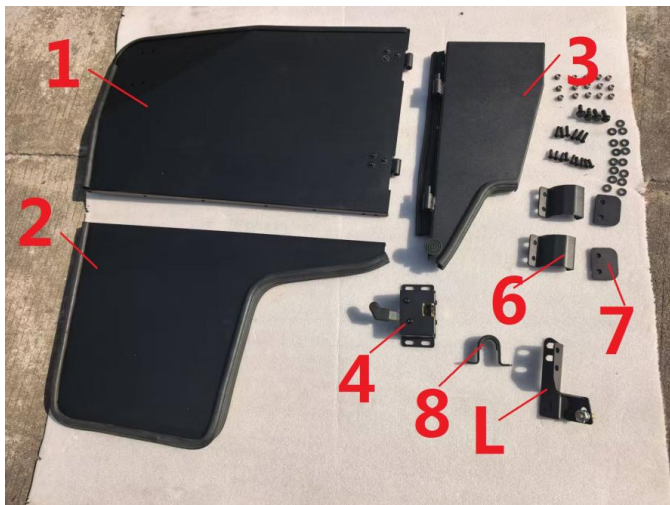

1. Assemble Part 1 and Part 2 using three M6x16 hex socket head cap screws, three M6 washers, and three M6 lock nuts. The left box outlines the assembly of 4 M6*20 hex socket screws, 4 M6 washers, and 4 M6 lock nuts, as shown. Do not fully tighten the screws.

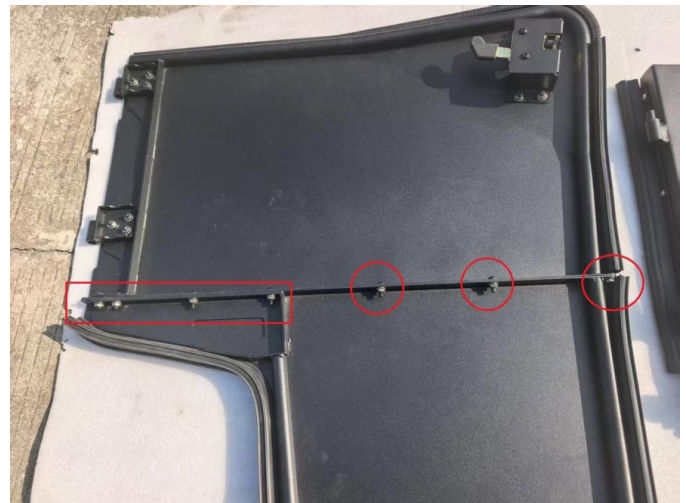

2. Secure Part 3 to Part 1 using four M6x16 hex socket head cap screws, four M6 washers, and four M6 lock nuts. Do not fully tighten the screws, as illustrated.



3. Remove the two screws from the front edge of the door (keep the screws for later use) and detach the plastic trim.

Aluminum Front Half Doors for Polaris Ranger 570 Midsize

YAP-030509-020



5. Secure Part 3 to the rear pillar using four M8x20 flange hex head bolts, along with two Part 6 and two Part 7 components. Do not fully tighten the bolts—position as shown.



4. Install Part L onto the front pillar using the two previously removed hex socket screws and two M8x20 flange hex head bolts, along with two M8 lock nuts. Tighten the screws as shown.



Aluminum Front Half Doors for Polaris Ranger 570 Midsize



YAP-030509-020

6. Fix Part 3 to the rear armrest using two M6x20 hex socket head cap screws and two M6 flat washers. Do not fully tighten the screws, as illustrated.



tighten the four screws on the door lock and all other installation screws, as illustrated.



7. Mount the left door onto the hinges and tighten the door attachment screws, as shown.



8. After adjusting the door lock position and securing it, push the upper hinge to the far right and tighten its three mounting screws. Then, push the lower hinge to the far left and tighten its three mounting screws. Finally,



Aluminum Front Half Doors for Polaris Ranger 570 Midsize



YAP-030509-020

9. Adjust the door lock to the proper position, then first tighten the four M8 screws connecting Part 3 before tightening all remaining screws and nuts to complete the installation.



Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.



Note: The door lock and hinge positions can be adjusted to modify the door lock engagement.