

Rear Cargo Box for Kawasaki Mule Pro FXT



YAP-031008-009

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT


The Rear Cargo Box is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.


Product and accessories picture:

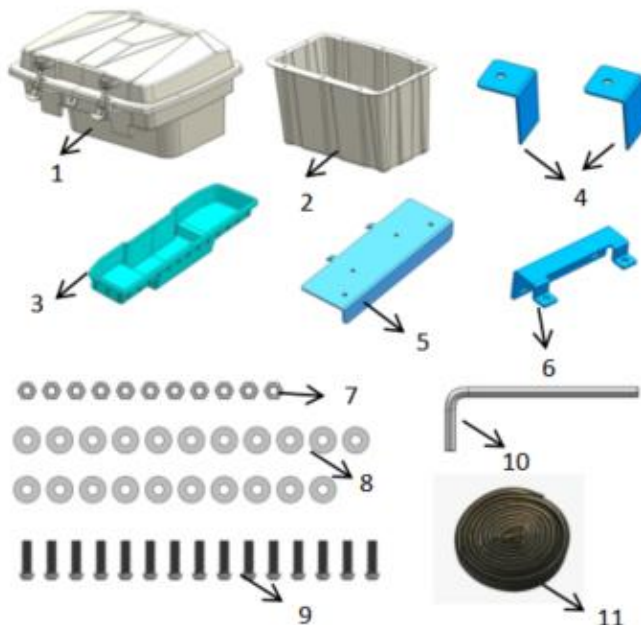

No.	Item	Quantity
1	Upper storage box	1
2	Lower storage box	1
3	Small storage tray	1
4	L-shaped bracket	2
5	Threaded plate	1
6	Clamping plate	1
7	M6 lock nuts	11
8	6x14 flat washers	21
9	M6x20 hex socket screws	15

10	Hex socket wrench	1
11	Foam strip	1

1. Assemble the separate storage compartments into a single unit using the M6x20 hex socket screws, flat washers, and M6 nuts provided with the product, as shown in the figure:

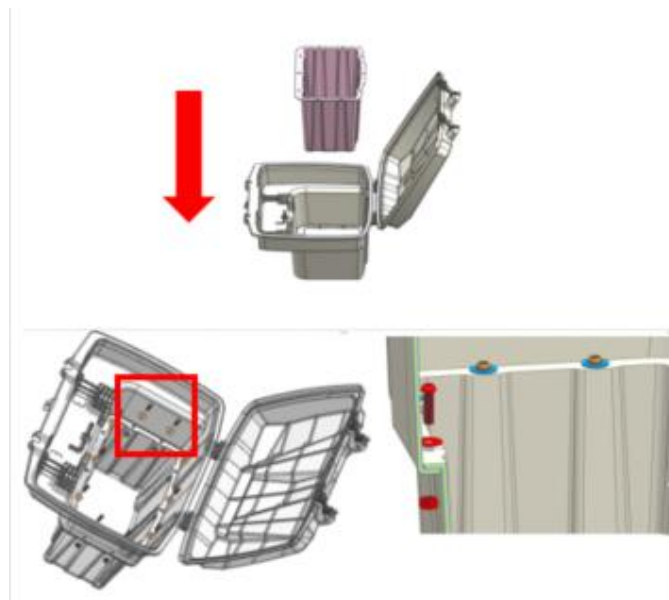


Rear Cargo Box for Kawasaki Mule Pro FXT




YAP-031008-009




2. Attach the included foam strip to the bottom of the lower compartment of the storage box, as shown in the figure:

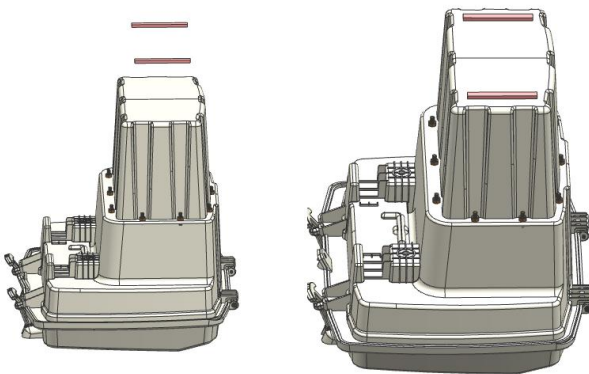


and secure them with M6x20 hex socket screws, as shown in the figure:

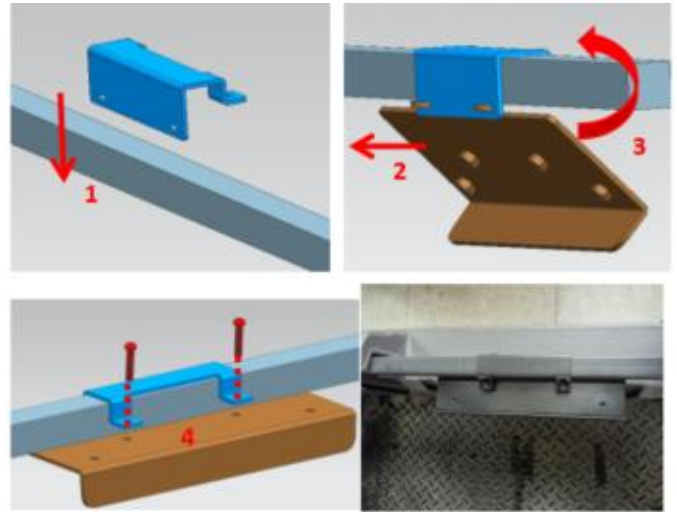

4. Install the storage box onto the square tubing of the rear cargo area railing and secure it using M6x20 hex socket screws and L-brackets, as shown in the figure:

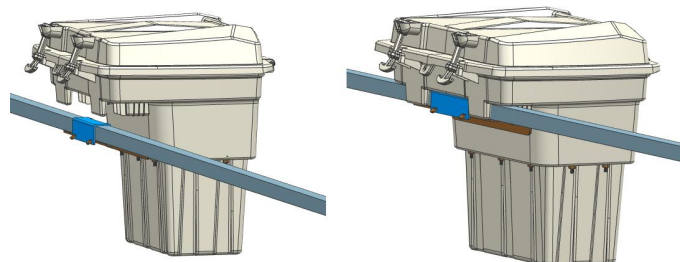


3. Install the included clamping plates and threaded plates onto the square tubing of the rear cargo area railing in the order 1-2-3-4,

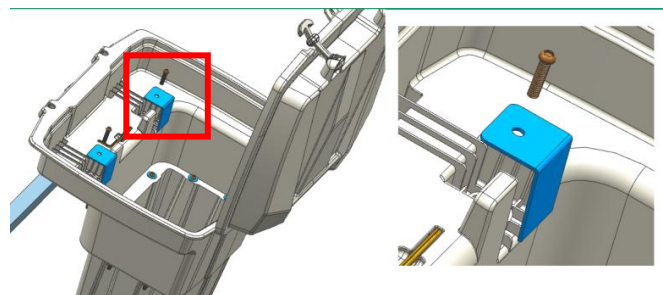


Rear Cargo Box for Kawasaki Mule Pro FXT



YAP-031008-009

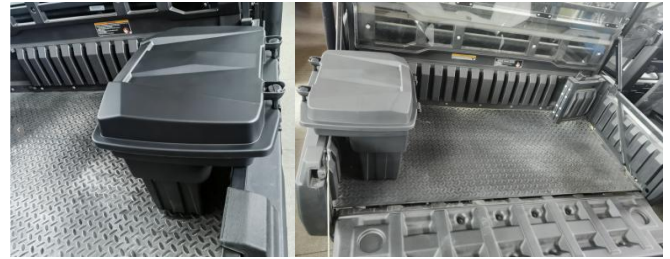

5. Install the hex wrenches and the small tray into the storage box, as shown in the figure:

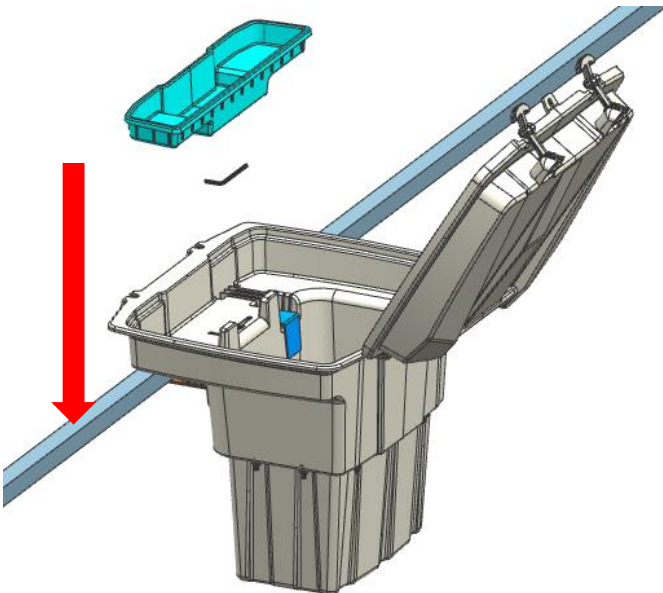

6. Installation complete!