

Upper Headlight w/ Bulb for Polaris Sportsman 570

SAUTV5

YAP-030501-043


BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

This Left Headlight w/Bulb is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

PRODUCT AND ACCESSORIES

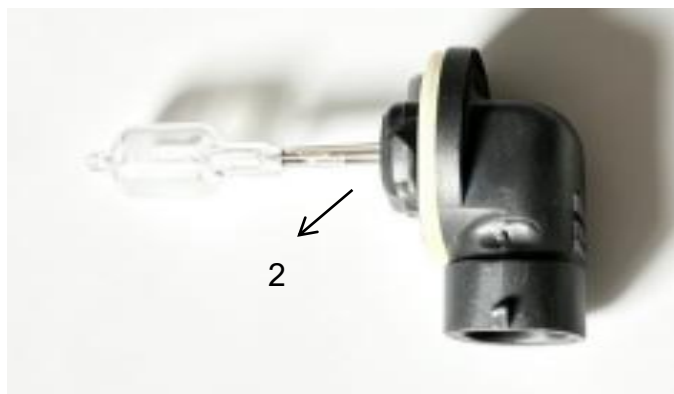

No.	Item	Qty.
1	Upper headlight housing	1pc
2	Bulb, halogen	1pc



3. First, remove the decorative front trim cover of the vehicle headlight, as shown in Figures 3–5:

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into “PARK”. Turn key to “OFF” position and remove from vehicle.
2. First, install the supplied halogen bulb into the lamp housing. As shown in Figures 1 and 2:

Upper Headlight w/ Bulb for Polaris Sportsman 570

SAUTV5


YAP-030501-043



4. Disconnect the wire harness connector of the original headlight and remove the original headlight. Then, transfer the adjustment screws from the original headlight to the new headlight housing in their original positions, as shown in Figure 6. After that, reconnect the wire harness connector to the new headlight and install it

back onto the vehicle, as shown in Figures 7 and 8. Secure both sides of the headlight with the original rubber bands, and finally reinstall the front trim cover, as shown in Figure 9.

Note: When installing the headlight, make sure the positioning posts on both sides are aligned with and snapped into the corresponding slots on the vehicle. Then, wrap and secure them with the original rubber bands (elastic straps) for additional fixation.

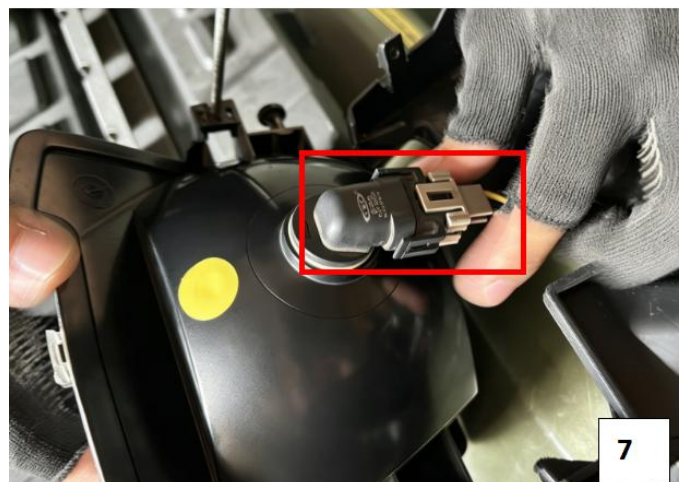

Upper Headlight w/ Bulb for Polaris Sportsman 570

YAP-030501-043

SAUTV^{VS}



4. Installation complete!

