

Front Roof Speaker Pods for for Can-Am Maverick R

SAUTV5

YAP-030603-295

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.


IMPORTANT

This ROOF SPEAKER PODS KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.


Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

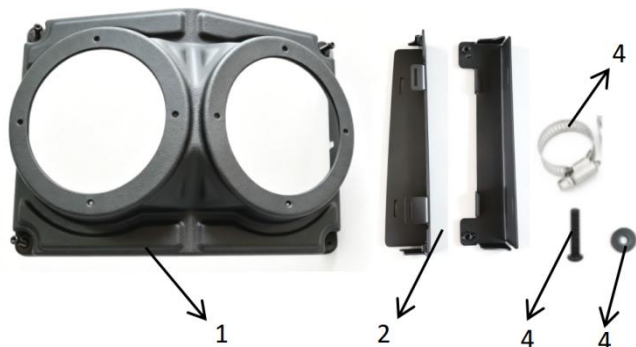

2. First, install the speakers you have provided onto the speaker bracket. Then, use the included Allen screws and flat washers to secure the metal brackets to both sides of the speaker bracket, as shown in Figures 1–3.

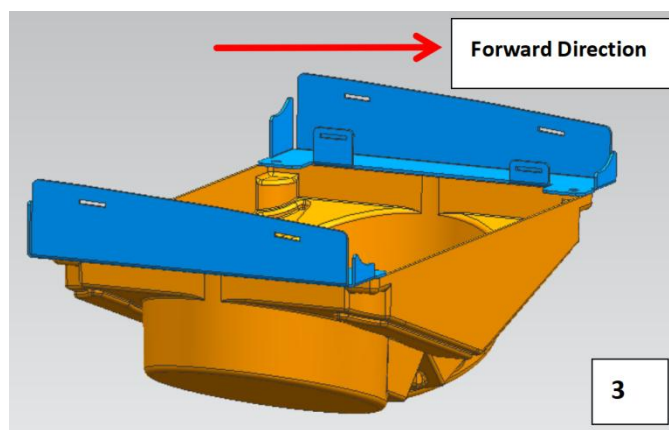

3. If the vehicle has a roof, remove it first; if not, proceed directly to installing the bracket. Place the assembled speaker bracket in the designated space at the front of the roof, then secure it with stainless steel clamps (finally, reinstall the roof on the vehicle), as shown in Figures 4 – 6.

Front Roof Speaker Pods for for Can-Am Maverick R

SAUTV^{VS}

YAP-030603-295



4. Installation complete.

